




Parts and Accessories Installation Instructions

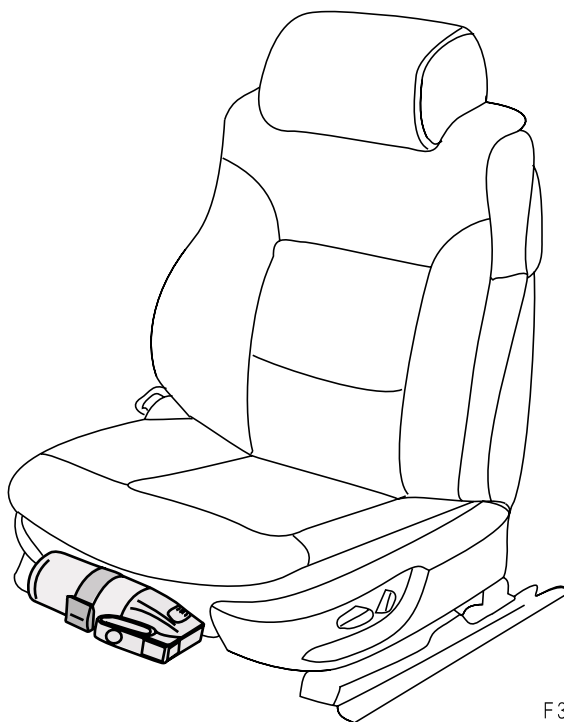

F 38 0001 EVA

Retrofit Retaining Bracket for Fire Extinguisher **BMW 7 Series (E38), BMW 5 Series (E39) and BMW 7 Series (E65)**

The installation time is approx. 0.5 hours, but this may vary depending on the condition of the car and the equipment in it.

Retrofit kit No.: 82 27 142 649
 82 27 9 404 488

Contents

Section	Page
Important information.....	3
1. Parts list	4
2. To install the fire extinguisher.....	5
3. Concluding work and operation	6

Important information

The retrofit kit is for use within the BMW dealership organisation only.

The tightening torque values for screw connections must be adhered to, they are set out in the TIS.

All work is shown using a left-hand drive vehicle. On RHD cars some work must be completed the opposite way round.

Target group


The target group for these installation instructions is specialist personnel trained on BMW cars with specialist knowledge of vehicle electrical systems.

Work:

All servicing, repair and installation work on BMW cars is completed at your own risk.

All work must be completed using the latest BMW repair manuals and circuit diagrams in a rational order using the prescribed tools (special tools) and observing current health and safety regulations.

1. Parts list

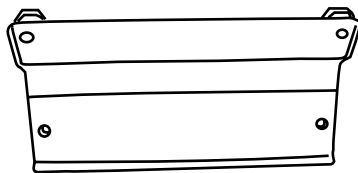

A



B



C



D




E

038 0069 Z

Legend

- A Retaining bracket
- B Spacer bush, 2x (not required for E65)
- C Hexagonal screw M6 x 16, 2x
- D Hexagonal screw M6 x 20, 2x
- E Washer M6, 4x

2. To install the fire extinguisher

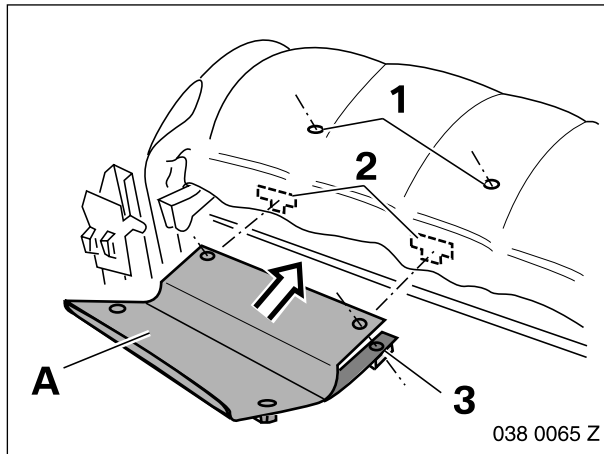

Move the driver's seat up to the rear stop and to the highest position at the front.

E38 and E39

Cut into the seat cover at the sheet metal apertures (2) and pierce at the screw connection points (1).

Guide the retaining bracket **A** and its cage nuts (3) through the cut in the seat cover and the sheet metal apertures (2).

E65

Remove the plastic trim from below the front of the seat.

Guide the retaining bracket **A** and its cage nuts (3) through the sheet metal apertures (2).



E38 and E39

Screw on the retaining bracket **A** as shown using hexagonal screws **D**, washers **E** and spacer bushes **B**.

E65

Screw on the retaining bracket **A** as shown using hexagonal screws **D** and washers **E** (spacer bushes **B** are not required).

Install the plastic trim below the front of the seat.

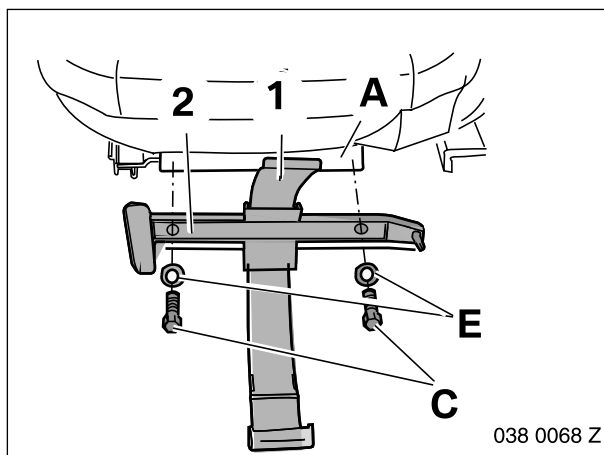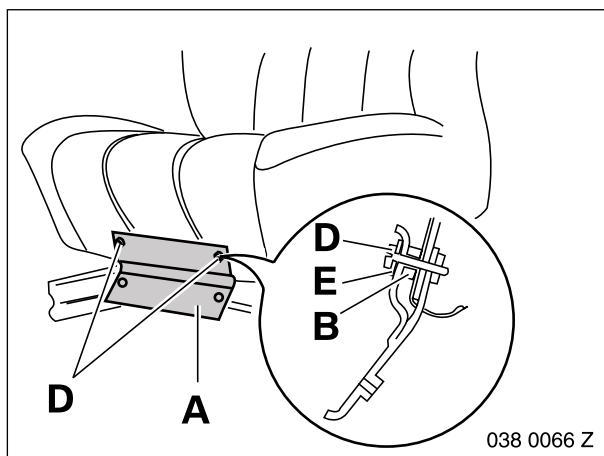


All cars

Position the retaining band (1) between the fire extinguisher bracket (2) and the retaining bracket **A**.

Insert the fixing stud of the retaining band (1) into the hole in the fire extinguisher bracket (2).

Screw the fire extinguisher bracket (2) onto the retaining bracket **A** using hexagonal screws **C** and washers **E**.

2. To install the fire extinguisher

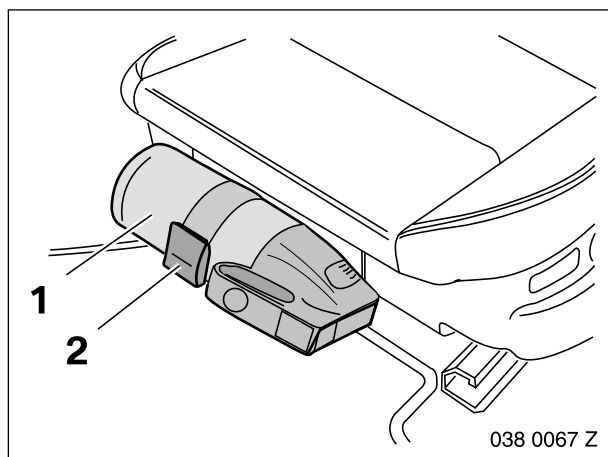

The fixing stud on the fire extinguisher bracket must be inserted in the outlet aperture of the fire extinguisher. ◀

Insert the fire extinguisher (1) into the fire extinguisher bracket and close the retaining band (2).

3. Concluding work and operation



- Affix the sticker supplied with the fire extinguisher at a suitable location (subject to consultation with the customer).
- Return the driver's seat to its normal position.



The procedure for removing and handling the fire extinguisher is described in the owner's manual supplied with the fire extinguisher. ◀