

CarlsonTM

Pet Products

Mini Gate with small pet door

Model # 0680PW

Assembly and Installation Instructions
Please read these instructions carefully before installing your gate.

NOTE: DO NOT USE THIS GATE FOR CHILDREN.

Important: Keep these instructions for future reference


This gate can be used in openings from 29 inches (including the main gate, one 6 and one 4 inch extensions) to 38 inches.

ADDITIONAL EXTENSIONS SOLD SEPARATELY.

Contact Carlson for questions and replacement parts. If in doubt about the use of your gate, call our customer care line at 952-440-1801. Carlson Pet Products, Inc. 16228 Main Ave, Suite 109, Prior Lake, MN 55372
Made In China.


Check that you have these contents:

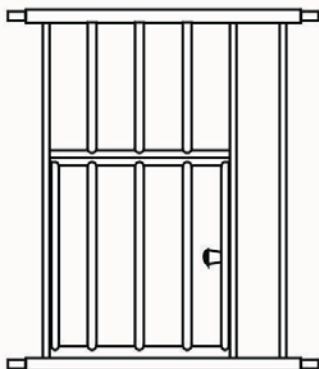


1. Main Gate Frame



2. Hardware Pack which should contain:


4 - Threaded Spindle Rods 

4 - Adjustable Wheel Spindles  (already assembled to the Spindle Threaded Rods)


4 - Wall Cups  4 - Screws  2 - Foot Stands 

3. Three Extensions

2 - 6" Extension 1 - 4" Extension

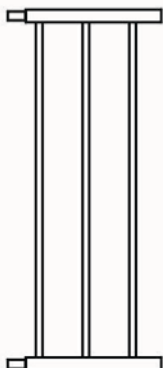

①



②

WARNING:

To prevent serious injury or death, securely install gate or enclosure and use according to manufacturer's instructions.


Important: The small pet door **MUST** be securely closed at all time.

Assembling and Installing Your Gate

Step 1.

Begin by locating the 4 Threaded Spindle Rods. Before you begin, turn the Adjustment Wheels clockwise until they are almost against the flat end of the Threaded Spindle Rods. **WARNING:** The Adjustment Wheel should NOT touch the flat end of the Thread Spindle Rod. If it does it might get stuck.

Diagram A.

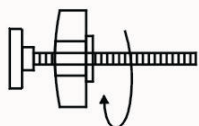


Step 2.

Join the Main Gate with the Extension (1) and (2), and then attach the foot stands to the gate as show in Diagram(B). You are going to insert the 4 Threaded Spindle Rods into the holes in the 4 ends of the gate.

****IMPORTANT: THE ENDS OF THE GATE FRAME ARE NOT THREADED.**

THE THREADED SPINDLE ROD SHOULD SLIDE INTO THE END OF THE FRAME TUBES WITHOUT ANY RESISTENCE. Push the Threaded Spindle Rods all the way into the frame tube until the Adjustment Wheel hits the end of the frame tube as shown in Diagram B.

Diagram B.

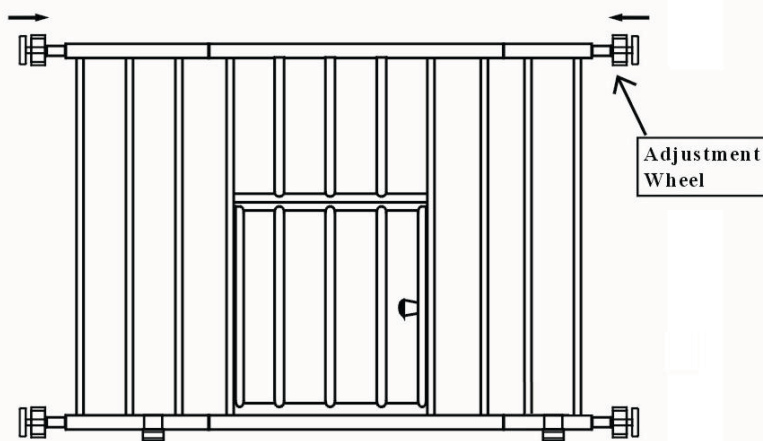



Mini Gate with small pet door

Model # 0680PW

Important: Keep these instructions for future reference


Step 3.

Positioning and Attaching the Wall Cups to your door opening.


Your gate is a pressure mounted gate. Therefore, it is not necessary to use the screw attached Wall Cups to your door opening if you choose not to. However, IF YOU ARE USING THE GATE AT THE TOP OF STAIRS, YOU MUST USE THE WALL CUPS. Regardless of whether you are using your gate at the top of stairs or not, using the Wall Cups will affix your gate more firmly in the doorway. So you may choose to use them in all applications. If you choose not to use the Wall Cups you may skip to Step 4 now.

Before attaching your Wall Cups to your doorway, you must make sure that you have the screw holes marked correctly. To do this, simply position your gate in the doorway so that it is level and centered as shown in Diagram C-1. Then, place the Wall Cups over the flat end of the Threaded Spindle Rods which should already be fully inserted into ends of the gate frame tubes as shown in Diagram C-2. Pull the Threaded Rods out in this manner. Then take a pencil and make a light mark on the wall around the parameter of Wall Cups. Once you have marked the correct spots on your walls you can move the gate aside. Next, you will need to mark the Screw holes. To do this simply take a Wall Cup and center it on each pencil circle you marked on your wall. Use a pencil to mark the small screw Hole in the center of the Wall Cup. You are ready to fasten your Wall Cups to the wall using the self tapping screws included in the hardware pack.

Diagram C.

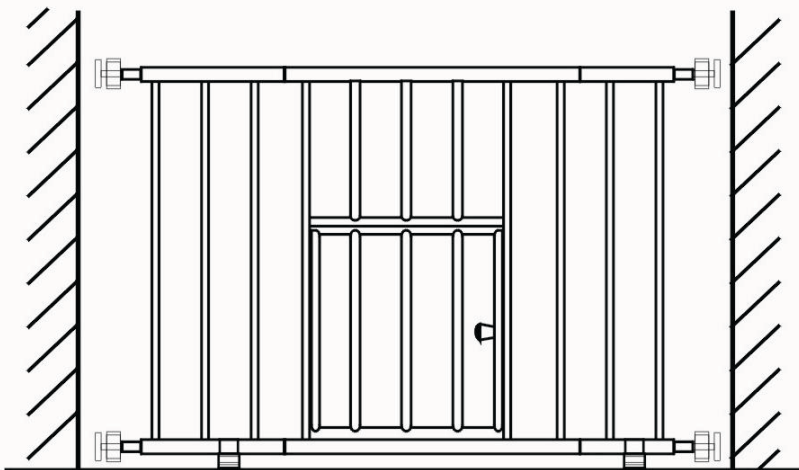

C - 1

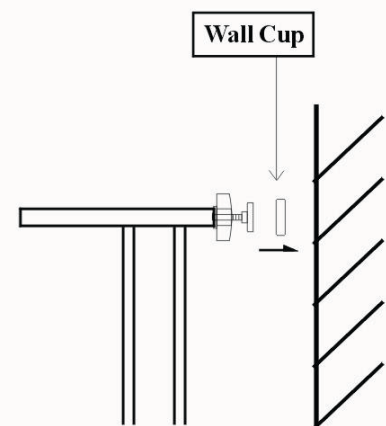


C - 2

Step 4.

You are now ready to install your gate in the doorway. Begin by positioning your gate level and centered in the doorway opening. Pull the 4 Threaded Spindle Rods out of the ends of the frame Tubes until the Flat Plastic End touches the wall. **If you are using the Wall Cups then the flat plastic ends of the Threaded Spindle Rods should go into the Wall Cups that are fastened to your wall. Next, while holding the flat plastic ends of the Threaded Spindle Rods against the wall, turn the Adjustment Wheels counter-clockwise until the Adjustment Wheels are up against the ends of the frame tubes as shown in Diagram D. **DO NOT TIGHTEN.** Go to Step 5 for Final Adjustment. **HELPFUL HINT:** It may be necessary to hold the Threaded Spindle Rod while turning the Adjustment Wheel to ensure the Threaded Spindle Rod does not turn.


Diagram D.

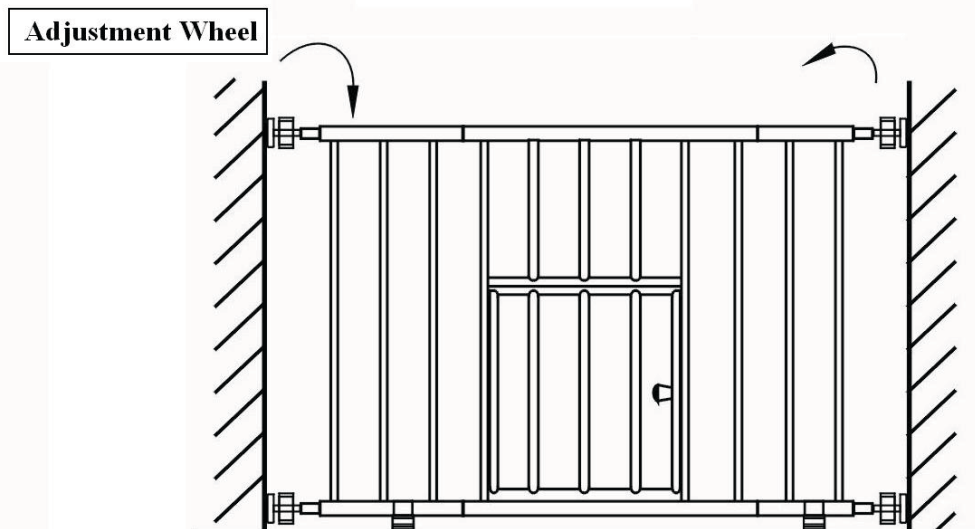

Step 5.

You are now ready to do the **Final Adjustment** to fasten your gate firmly in the doorway. Start by turning the **BOTTOM Adjustment Wheels FIRST**. Continue to turn the lower Adjustment Wheels counter-clockwise until the Adjustment Wheels are firmly against the ends of the frame tubes. . **IMPORTANT:** There should be equal space on each side of the gate. To easily determine this look at the length of threaded rod is that is showing on each side. If the gate is centered, there will be an equal length of threaded rod showing. If more threaded rod is showing on one side you can adjust this using the Adjustment Wheels. Simply turn the side that has too much Threaded Rod showing clockwise, and then turn the other side counter-clockwise. As you do this you will see the sides equaling out as shown in Diagram E. Next, tighten the top 2 Adjustment Wheels by turning them counter-clockwise. Again, make sure both sides are equal as you tighten.

Diagram E .

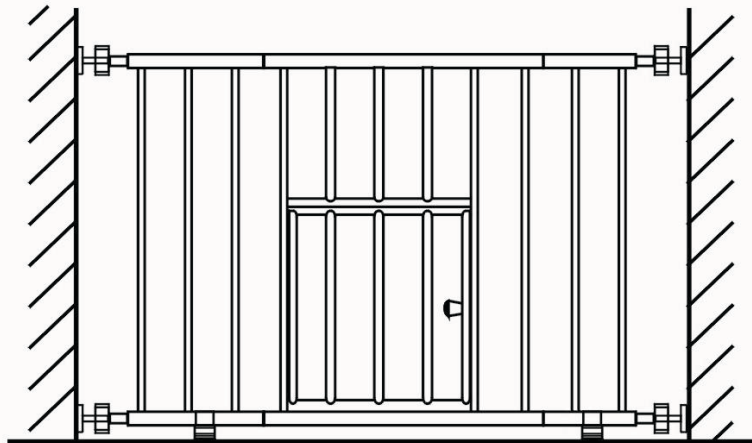


CarlsonTM

Pet Products

Mini Gate with small pet door


Model # 0680PW

Important: Keep these instructions for future reference

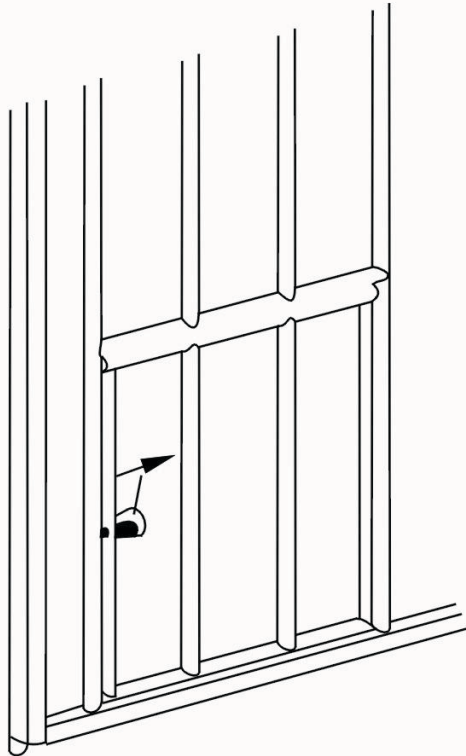

TO OPEN the small pet door, pull knob out and swing the door open.

Diagram (F - 1)

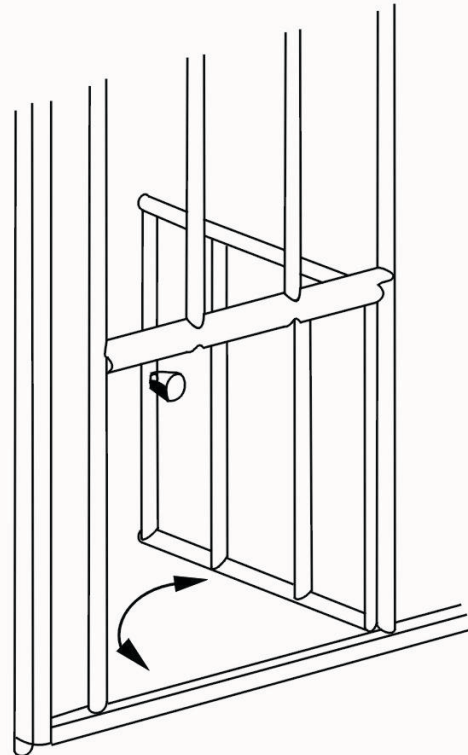

TO CLOSE the small pet door, pull the knob out and shut the door. Once the locking pin is aligned with the hole in the gate frame, release the knob.

Diagram (F - 2)

Important: The Small Pet Door is to remain closed and securely locked when gate is used for children.